FIXED BACK

Included:

(5) Screw packs*:

(4) M4x12mm socket caps
(for attaching to camera brain)

(6) M3x14mm Phillips pan head
(RED/Blueshape)

(4) M3x12mm Phillips pan head
(Anton Bauer QRC)

(4) M3x8mm Phillips
(IDX/Swit)

*see screw chart & diagram below

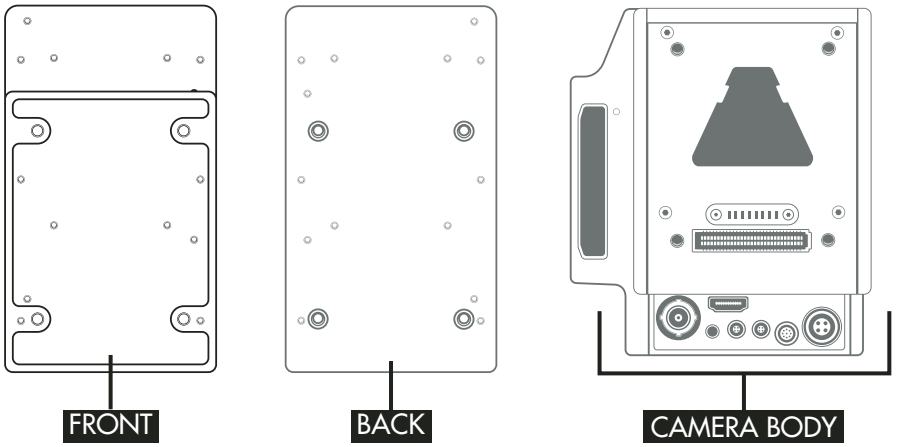

INSTALLATION

1. Locate and align **M4 HOLES** on **CAMERA BODY** and **FIXED BACK**.
2. Select and tighten **M4 SOCKET** caps with allen wrench to attach **FIXED BACK** to **CAMERA BODY**.
3. Select and align **BATTERY PLATE** to **FIXED BACK**, locate and tighten proper **SCREWS** using **SCREW CHART** below.
4. Attach **LEMO** to **POWER PORT**.

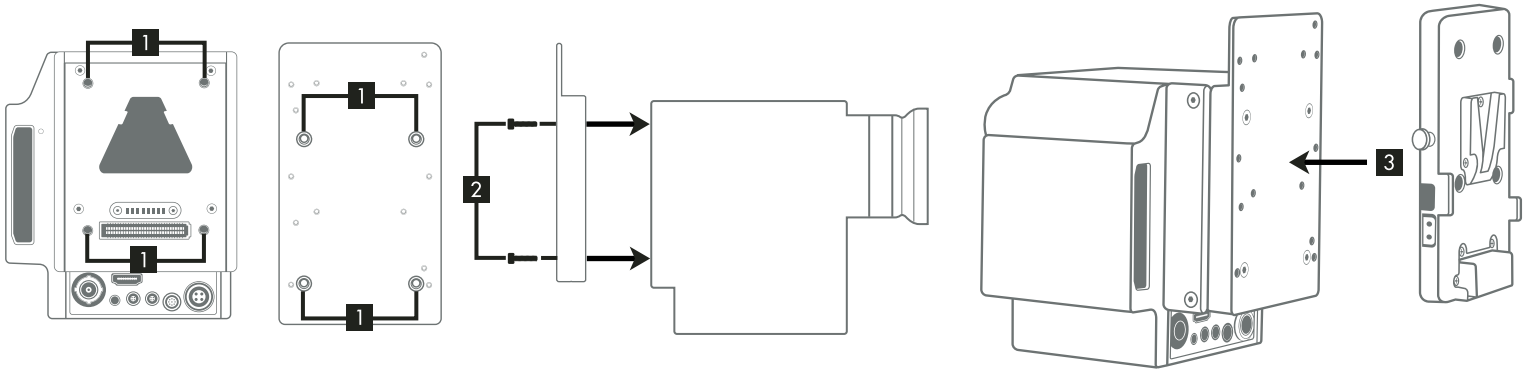

Find appropriate screws and threaded holes by using the **SCREW CHART** below. Insert and tighten into corresponding hole as shown on **HOLE DIAGRAM**.

HOLE DIAGRAM

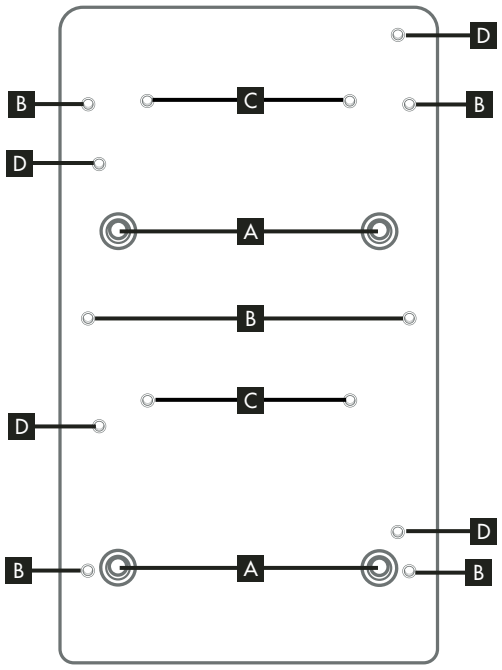

SCREW CHART

A= Camera Brain- M4x12mm socket caps

B= RED/Blueshape- M3x14mm Phillip

C= Swit/IDX- M3x8mm Phillips

D= Anton Bauer QRC- M3x12mm Phillips

⚠ IMPORTANT

FIXED BACK can only be attached to camera brain.

© Wooden Camera, Inc. 2011-2013